


STEERING COLUMN INSULATOR
AS VIEWED FROM WIRE END

CAV	CIRCUIT	DESCRIPTION	SHEET
1	V3 18BR/WT	WIPER MOTOR-LOW SPEED	40
2	V5 18DG	WIPER-PARK	
3	V10 18BR	WASHER MOTOR	
4	V6 18DB	WIPER-IGNITION FEED	
5	V4 18RD/YL	WIPER MOTOR-HIGHER SPEED	
6			39
7			
8			
9			
10			
11	L60 18TN	RIGHT FRONT TURN SIGNAL	35
12	L62 18BR/RD	RIGHT REAR TURN SIGNAL	
13	L19 18PK	HAZARD FLASHER FEED	
14	L50 18WT/TN	STOP LAMP FEED	
15	L63 18DG/RD	LEFT REAR TURN SIGNAL	
16	L61 18LG	LEFT FRONT TURN SIGNAL	
17	L6 18RD/WT	TURN SIGNAL-FLASHER FEED	
18	L4 14VT/WT	LOW BEAM-HEADLAMPS	35
19	L2 14LG	HEADLAMP FEED	
20	L3 14RD/OR	HIGH BEAM-HEADLAMPS	
21	L20 14LG/WT(2)	HEADLAMPS-OPT HORN FEED	
22			
23			
24			

STEERING COLUMN CONNECTOR
WITH 2 SPEED WIPERS

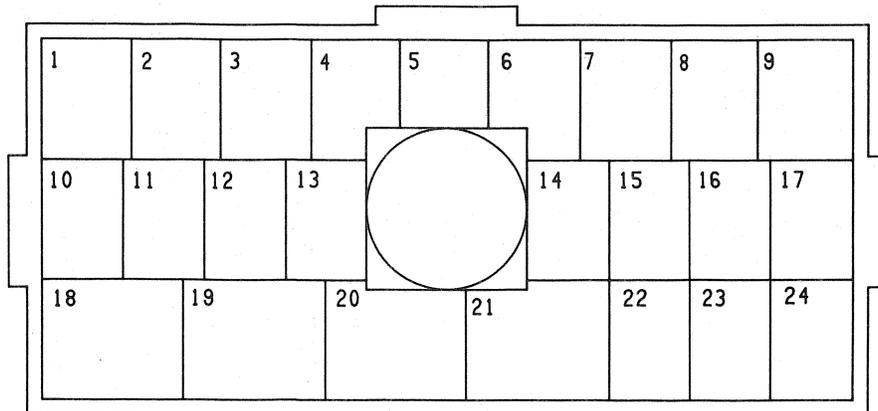

STEERING COLUMN INSULATOR
AS VIEWED FROM WIRE END

CAV	CIRCUIT	DESCRIPRION	SHEET
1	V9 18WT/BK	INTERMITTENT WIPE MODULE	41
2	V8 18VT	INTERMITTENT WIPE MODULE	
3	V10 18BR	WINDSHIELD WASHER MOTOR	
4	V6 18DB	WIPER SWITCH FEED	
5	V4 18RD/YL	WIPER MOTOR-HIGH SPEED	
6	V3 18BR/WT	WIPER MOTOR-LOW SPEED	
	V3 18BR/WT	WIPER SWITCH	
7	V7 18DG/WT	INTERMITTENT WIPE MODULE	
8	V17 18DG/YL	INTERMITTENT WIPE MODULE	
9	V3 18BR/WT	WIPER SWITCH	
10			39
11	L60 18TN	RIGHT FRONT TURN SIGNAL	
12	L62 18BR/RD	RIGHT REAR TURN SIGNAL	
13	L19 18PK	HAZARD FLASHER FEED	
14	L50 18WT/TN	STOP LAMP FEED	
15	L63 18DG/RD	LEFT REAR TURN SIGNAL	
16	L61 18LG	LEFT FRONT TURN SIGNAL	
17	L6 18RD/WT	TURN SIGNAL-FLASHERFEED	35
18	L4 14VT/WT	LOW BEAM-HEADLAMPS	
19	L2 14LG	HEADLAMP FEED	
20	L3 14RD/OR	HIGH BEAM-HEADLAMPS	
21	L20 14LG/WT(2)	HEADLAMP-OPT HORN FEED	
22			
23			
24			

STEERING COLUMN CONNECTOR
WITH INTERMITTENT WIPER