


**REMOVAL AND INSTALLATION (Continued)**

(3) Disconnect the refrigerant lines from the compressor and the evaporator. Install plugs in, or tape over, all of the open refrigerant fittings.

(4) Unplug the wire harness from the low pressure cycling clutch switch (Fig. 24).

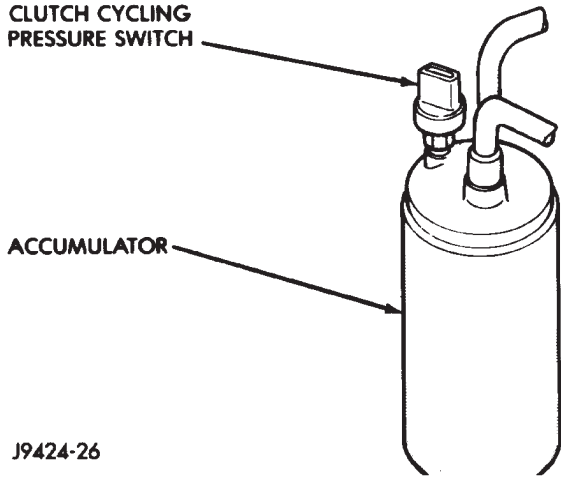

J9424-26

**Fig. 24 Low Pressure Cycling Clutch Switch**

- (5) Loosen the support bracket screw.
- (6) Remove the accumulator.

**INSTALLATION**


- (1) Install the accumulator in the support bracket.
- (2) Tighten the support bracket screw.
- (3) Plug the wire harness into the low pressure cycling clutch switch.
- (4) Remove the plugs or tape from the refrigerant line fittings. Connect the refrigerant lines to the compressor and the evaporator.
- (5) Evacuate and charge the refrigerant system as described in this group.
- (6) Connect the battery negative cable.

**LOW PRESSURE CYCLING CLUTCH SWITCH**

- (1) Disconnect and isolate the battery negative cable.
- (2) Unplug the wire harness connector from the switch.
- (3) Unscrew the switch from the fitting on the accumulator.
- (4) Reverse the removal procedures to install.

**HEATER-A/C CONTROL**

- (1) Disconnect and isolate the battery negative cable.
- (2) Remove the instrument cluster bezel. Refer to Group 8E - Instrument Panel Systems for the procedures.
- (3) Remove the heater-A/C control retaining screws (Fig. 25).

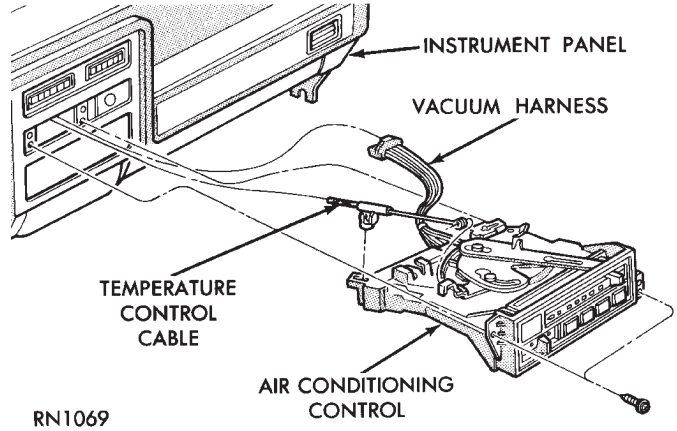


**Fig. 25 Heater-A/C Control Remove/Install**

- (4) Pull the control rearward and disconnect the wiring connector, the vacuum harness connector, and the temperature control cable.
- (5) Reverse the removal procedures to install.

**BLOWER MOTOR**

**REMOVAL**

- (1) Disconnect and isolate the battery negative cable.
- (2) Remove the lower instrument panel module. Refer to Group 8E - Instrument Panel Systems for the procedures.
- (3) On vehicles with air conditioning, disconnect the two vacuum lines from the recirculating air door vacuum actuator.
- (4) Unplug the blower motor wiring connector.
- (5) Remove the two screws at the top of the blower housing securing it to the heater-A/C housing cover.
- (6) Remove the five screws from around the blower housing and separate the blower housing from the heater-A/C housing (Fig. 26).

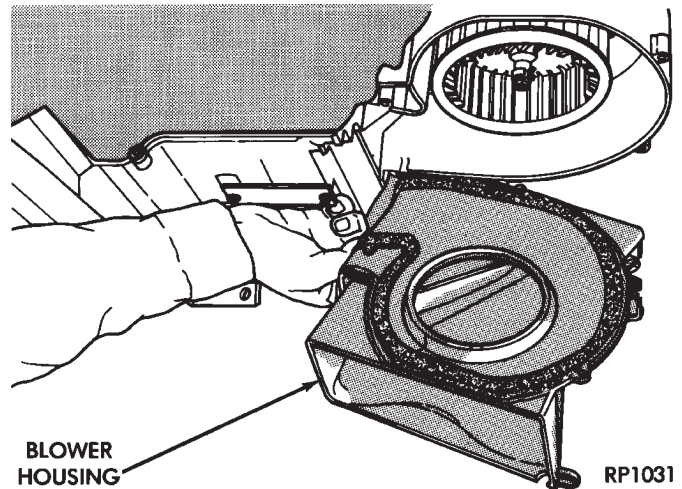

**Fig. 26 Blower Housing Remove/Install - Typical**