


PASSENGER
HEATED SEAT
CUSHION

PASSENGER HEATED SEAT CUSHION - 4 WAY


CAV	CIRCUIT	FUNCTION
1	P130 16TN	RIGHT SEAT HEATER B(+) DRIVER
2	Z2 18BK/LG	GROUND
3	P144 20BK/WT	SEAT TEMPERATURE 5V SUPPLY
4	P142 20DB	RIGHT SEAT TEMPERATURE SENSOR INPUT

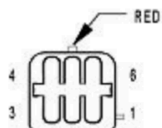

DRIVER HEATED
SEAT SWITCH

DRIVER HEATED SEAT SWITCH - RED 6 WAY


CAV	CIRCUIT	FUNCTION
1	P137 20DG	LEFT SEAT LOW HEAT LED DRIVER
2	E2 220R	PANEL LAMPS FEED
3	Z3 20BK/OR	GROUND
4	F15 20DB	FUSED IGNITION SWITCH OUTPUT (RUN)
5	P139 20WT	LEFT SEAT HIGH HEAT LED DRIVER
6	P7 20LB/BK	DRIVER HEATED SEAT SWITCH

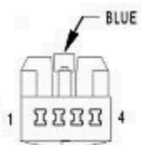

DRIVER
HEATED SEAT
CUSHION

DRIVER HEATED SEAT CUSHION - BLUE 4 WAY


CAV	CIRCUIT	FUNCTION
1	P131 16RD/DG	LEFT SEAT HEATER B(+) DRIVER
2	Z2 18BK/LG	GROUND
3	P144 20BK/WT	SEAT TEMPERATURE 5V SUPPLY
4	P141 20TN/LB	LEFT SEAT TEMPERATURE SENSOR INPUT

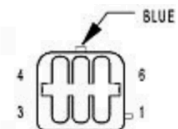

PASSENGER HEATED
SEAT SWITCH

PASSENGER HEATED SEAT SWITCH - BLUE 6 WAY

CAV	CIRCUIT	FUNCTION
1	P138 20VT/LG	RIGHT SEAT LOW HEAT LED DRIVER
2	E2 220R	PANEL LAMPS FEED
3	Z3 20BK/OR	GROUND
4	F15 20DB	FUSED IGNITION SWITCH OUTPUT (RUN)
5	P140 20VT/BK	RIGHT SEAT HIGH HEAT LED DRIVER
6	P8 20LB/WT	PASSENGER HEATED SEAT SWITCH

 

SEAT
HEAT
INTERFACE
MODULE

SEAT HEAT INTERFACE MODULE - 14 WAY

CAV	CIRCUIT	FUNCTION
1	P7 20LB/BK	DRIVER HEATED SEAT SWITCH
2	P144 20BK/WT	SEAT TEMPERATURE 5V SUPPLY
3	P130 16TN	RIGHT SEAT HEATER B(+) DRIVER
4	F235 16RD	B(+) TO HEATED SEAT MODULE
5	P131 16RD/DG	LEFT SEAT HEATER B(+) DRIVER
6	F235 16RD	B(+) TO HEATED SEAT MODULE
7	P142 22DB	RIGHT SEAT TEMPERATURE SENSOR INPUT
8	P141 20TN/LB	LEFT SEAT TEMPERATURE SENSOR INPUT
9	P8 20LB/WT	PASSENGER HEATED SEAT SWITCH
10	P138 20VT/LG	RIGHT SEAT LOW HEAT LED DRIVER
11	P140 20VT/BK	RIGHT SEAT HIGH HEAT LED DRIVER
12	P137 20DG	LEFT SEAT LOW HEAT LED DRIVER
13	Z2 18BK/LG	GROUND
14	P139 20WT	LEFT SEAT HIGH HEAT LED DRIVER